

 
WFS-58

The WFS-58 is a smart audio system which provides the following feature:

- Voice control of primary functions using Alexa with Amazon Echo products.

The WFS-58 works with Alexa so you can use voice commands to easily control the system via your Echo devices - pause, skip to the next track, mute, play a genre, turn the volume up or down, or even ask Alexa what's playing on the WFS-58. You can control and enjoy your music simply by giving voice commands to your Echo device, such as "Alexa, play the playlist Dear Mama on the WFS-58."

You can use the UNDOK smartphone app to give the WFS-58 a friendly name to indicate its location, making it easier for your Echo device to play music from the smart audio system.



3PDA (Alexa) Setup Guide


Prerequisites

- WFS-58:
 - » Connected to network with internet access
- Active Amazon Account
- Amazon Alexa device
 - » Setup and Logged into Amazon account
- FSDCA (Nuvola) Auth account



Enabled FSDCA (Nuvola) skill in Alexa account

This section only applies if a new account had to be made, or the accounts have become unlinked.

Note: On some devices the layout of controls may be different from the following display and may also change with different versions of the app.













- Using either the Amazon Alexa Android / iOS app , or the dashboard at alexa.amazon.com

Ensure the app or dashboard is logged in to the same account that the Echo / Echo Dot is logged in as.

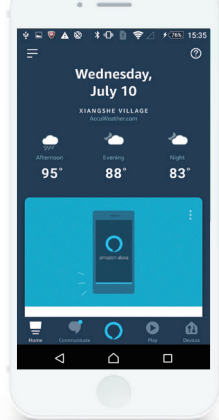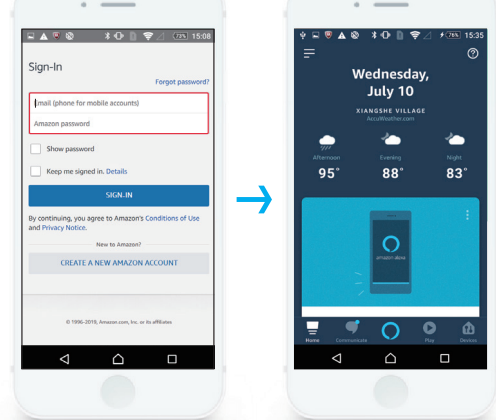



- Add Alexa device

In following, "Echo Dot" (for example) is the Alexa device for setting up.

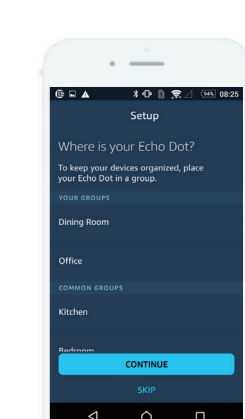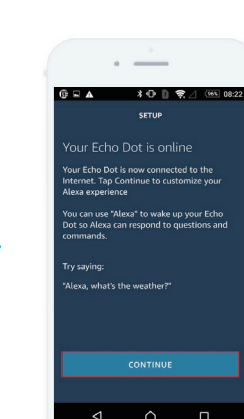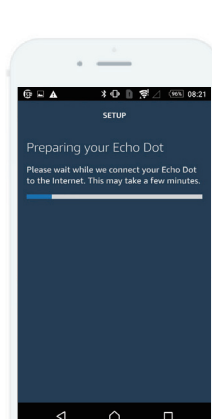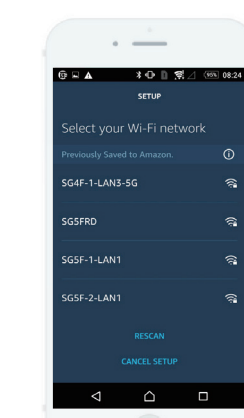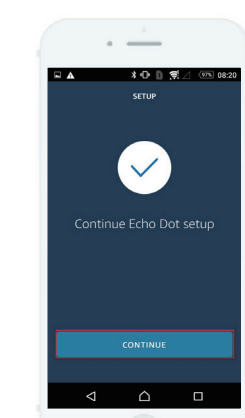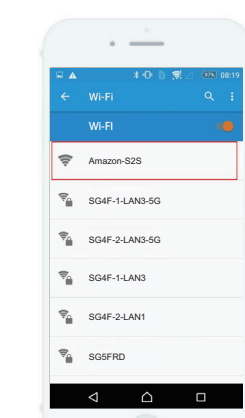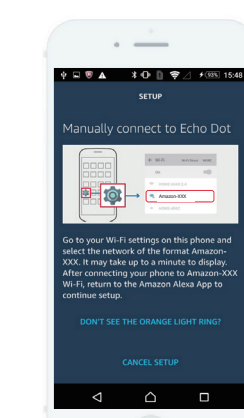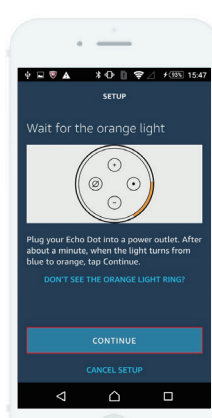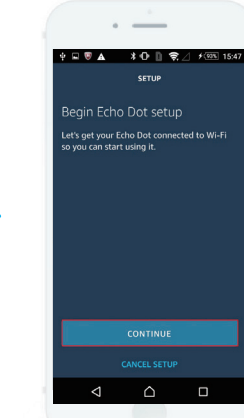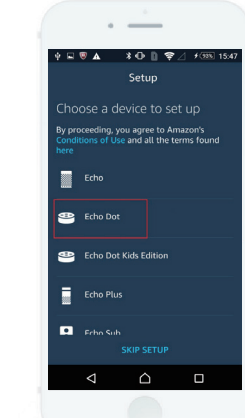
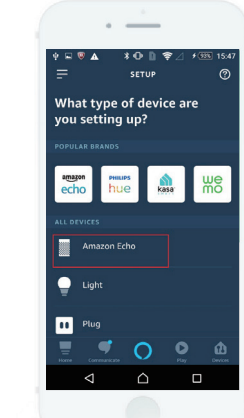
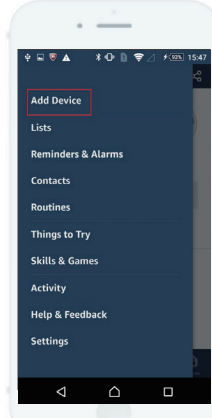


If the above steps are not set up successfully, please confirm whether the network is smooth.


- Go to "Skills & Games"

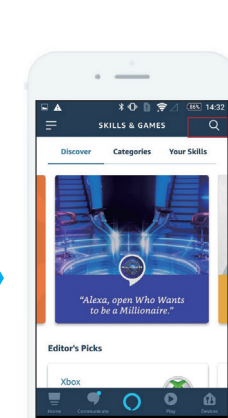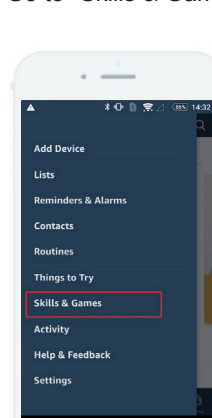




- Search and select "Nuvola"

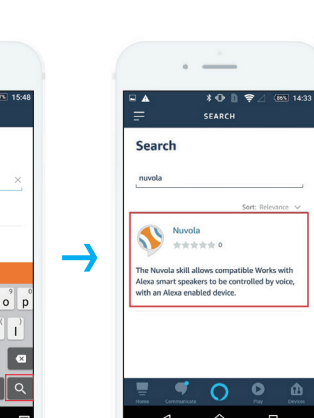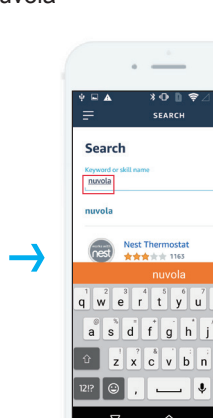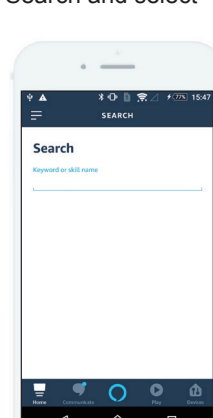

- Select "ENABLE TO USE"

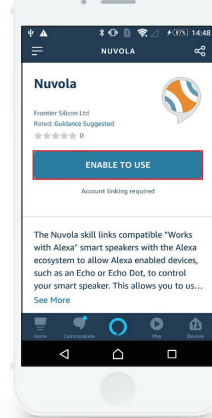




- You should be directed to a login page for FSDCA (Nuvola). Use the FSDCA (Nuvola) account you wish to link with the Amazon account to log in. When returned to the app or dashboard, you should be prompted to discover devices. If you know there are devices on your FSDCA (Nuvola) auth account, and these are the up-to-date pairings of the devices you want to use, go ahead and press "Discover". Otherwise, press "Cancel" and perform discovery later.

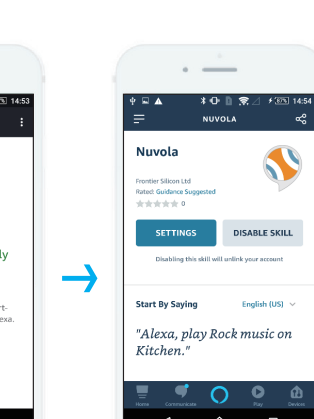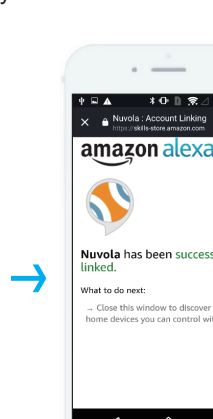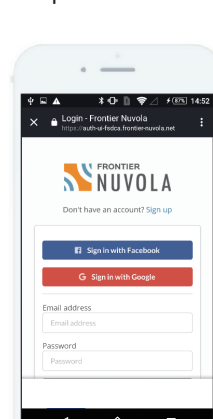




This is all setup needed in Alexa Amazon account.

Link FSDCA (Nuvola) account with Amazon account

 - Load UNDOK app
- Select your 3PDA speaker from the home screen
- Navigate to settings -> UNDOK Settings




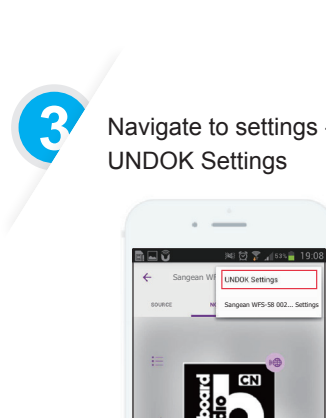
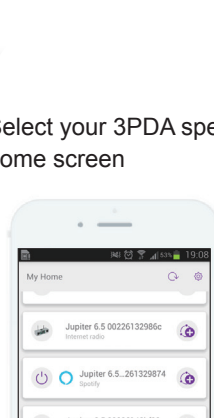
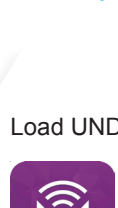


- Select Frontier Nuvola Account
- Select Login with UNDOK
- Sign in or create a new account.


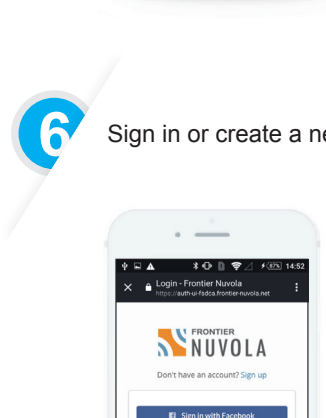
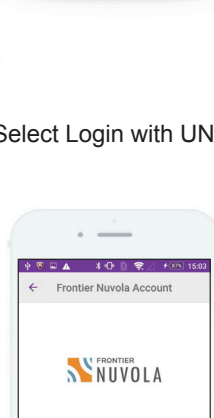
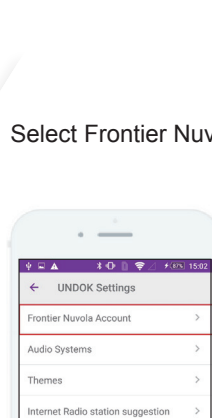


Adding device(s) for 3PDA control

- Rename the default friendly name of device
- Go back to UNDOK Settings menu and select Frontier Nuvola Account

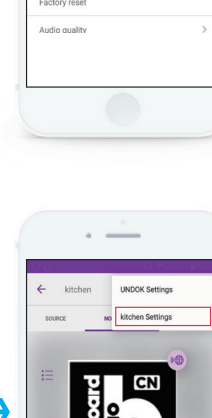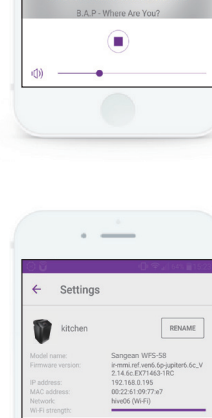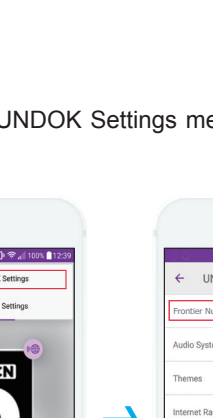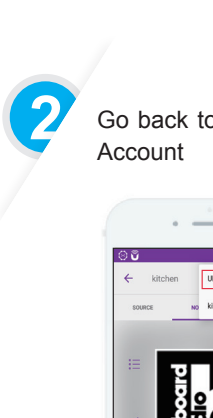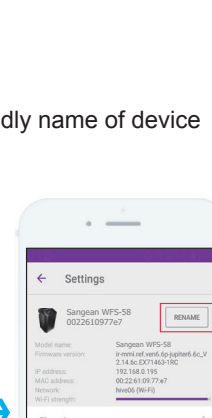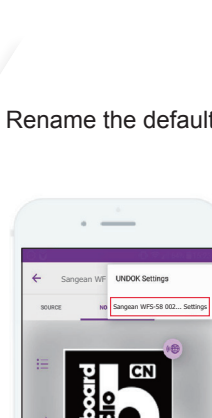

- Select "Add device" to link your device to the FSDCA (Nuvola) cloud

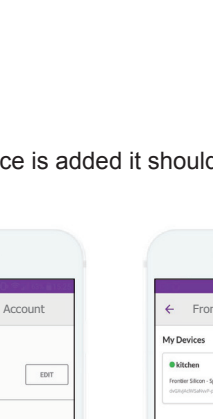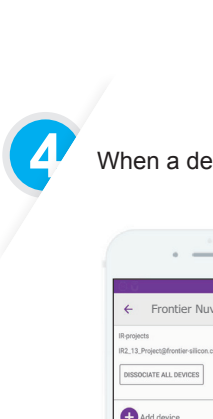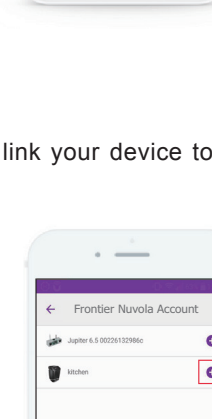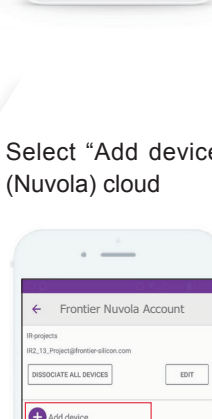

- When a device is added it should appear under "My devices"

Device discovery

It is important that this process is followed exactly whenever a new FSDCA (Nuvola) account association is made on the device, as Amazon somehow allowed multiple devices with the same name. Users should avoid naming devices similarly.

There are 2 methods:

Using voice command and request Alexa device to discover the new available device(s). "Alexa, discover my devices."

Using either the Amazon Alexa Android / iOS app, or the dashboard at alexa.amazon.com

- Ensure the app or dashboard is logged in to the same account that the Echo / Echo Dot is logged in as.
- Go to "Smart Home"
- Select "Devices"
- Either press "Forget All" or forget individual devices with the name you want to use.
- Press the "Discover" button in the app / dashboard.
- When discovery is complete, confirm that the new device is listed in the app / dashboard Smart Home Devices screen with the correct name.

The following shows the play in UNDOK and WFS-58 when it is streaming Amazon music via 3PDA.

